


## Installation clearances

All dimensions are in millimetres (mm). Refer to the installation manual before fitting.

| Clearance           | Code | Dinder 80 | Dinder 80 Freestanding |
|---------------------|------|-----------|------------------------|
| From rear wall      | dR   | 250       | 250                    |
| From side walls     | dS   | 200       | 200                    |
| From top            | dC   | 350       | 350                    |
| From bottom         | dB   | 50        | 50                     |
| From floor in front | dF   | 500       | 500                    |
| Side radiation area | dL   | 500       | 500                    |
| From front walls    | dP   | 2000      | 2000                   |

Dinder 80

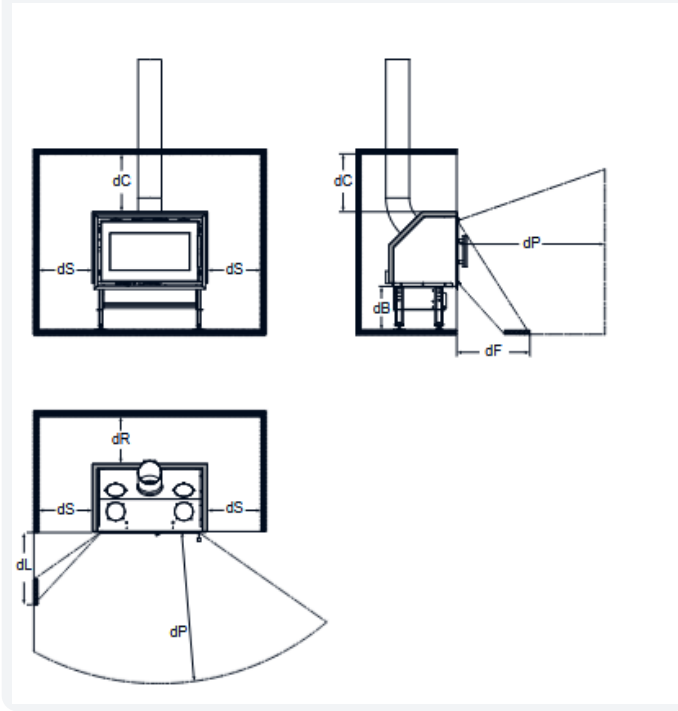

Dinder 80 Freestanding

